SERVICE UNTERLAGEN POPPY CS 508, CR 2003
SERVICE MANUAL MODEL POPPY CS 508, CR 2003
SCHEMATIC DIAGRAM

Q1 2SC-732 Gr Q2 2SC-733BL Q3 2SC-733Gr Q4, Q5 2SC-509Y

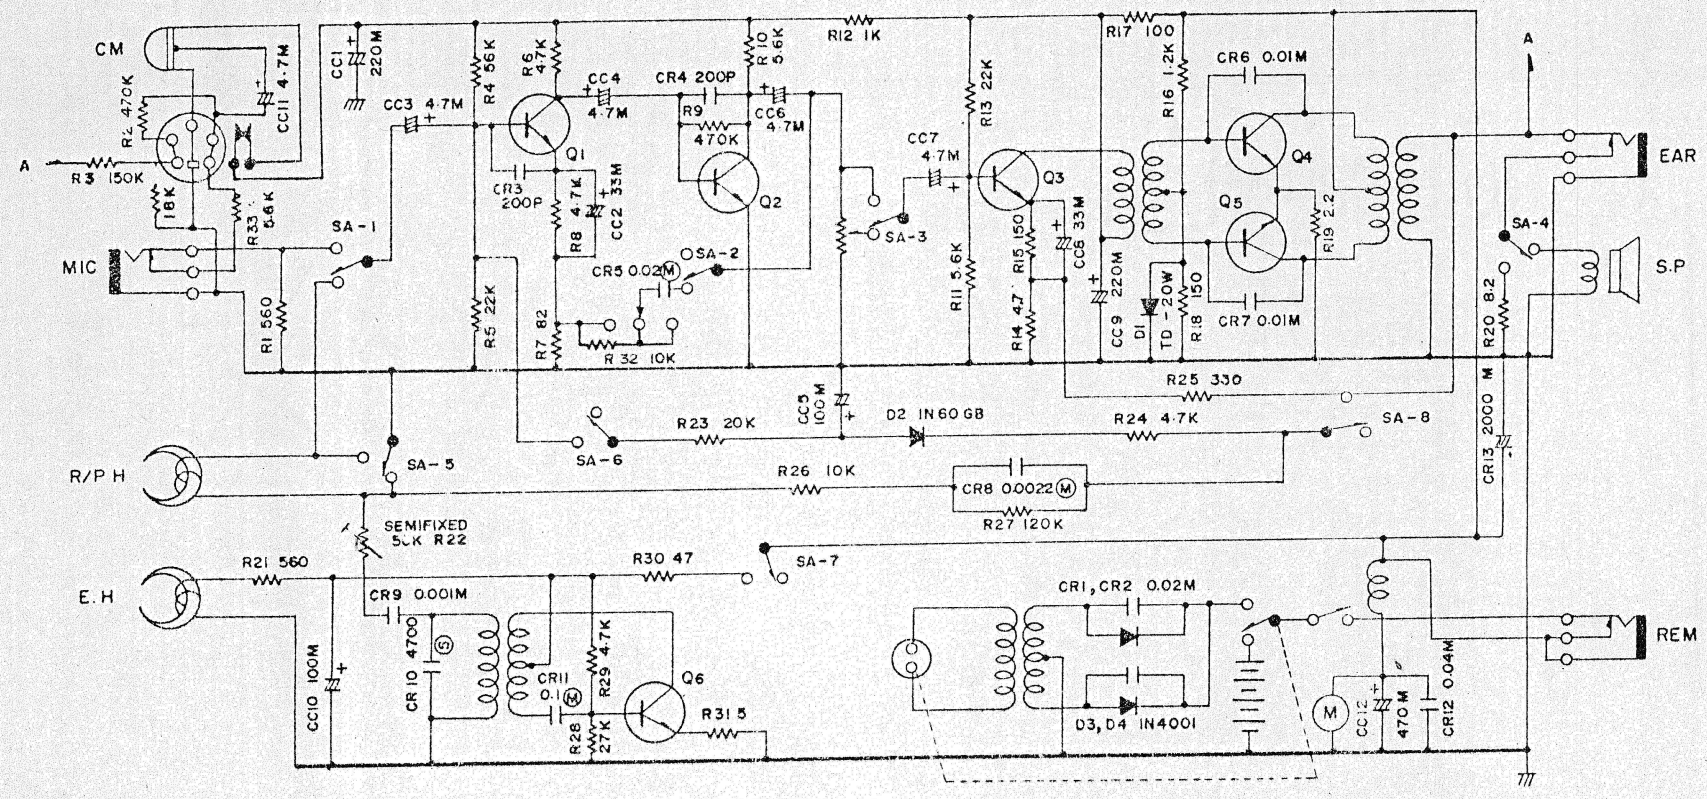

Q6 2SC-733BL

Lehnert GmbH

6600 Saarbrücken
Postfach 809

CS-508 , CR 2003

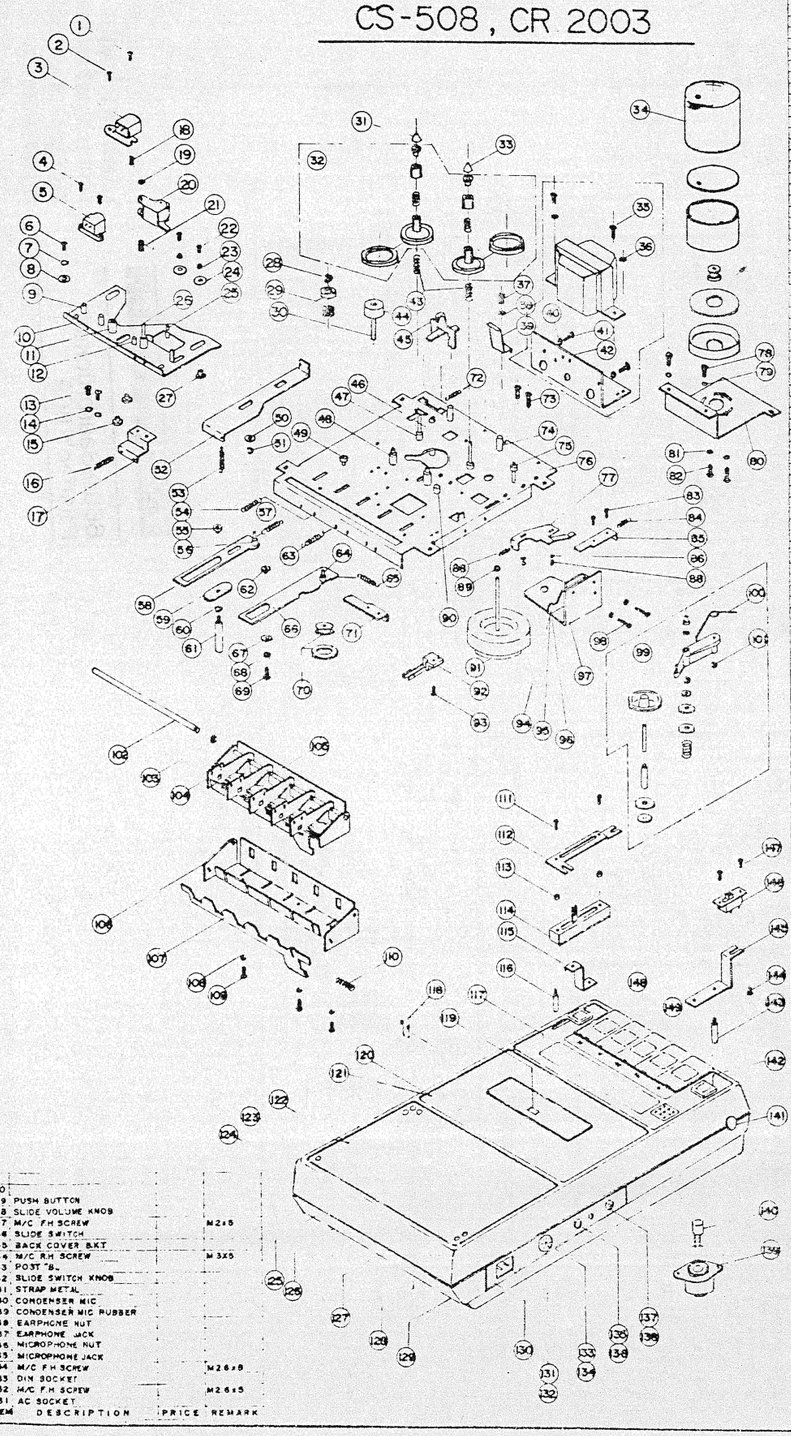

ITEM	DESCRIPTION	PRICE	REMARK
1	M/C R.H SCREW		M2x7
2	M/C R.H SCREW		M2x5
3	RECORDING HEAD ASS'Y		1K5-HH1
4	M/C SCREW		M2.6x6
5	ERASING HEAD ASS'Y		1K5-JH1
6	M/C SCREW		M2.6x6
7	SPRING WASHER		M2.6
8	FLAT WASHER		3 x10 x0.3t
9	ERASING HEAD STUD		6 x14L
10	SUB CHASSIS		
11	RECORDING HEAD STUD "L"		
12	RECORDING HEAD STUD "S"		
13	M/C R.H SCREW		M3x5(180)
14	SPRING WASHER		M3
15	SUB CHASSIS SPACER		
16	SUB CHASSIS SPRING		0.8 x4.2 x10L
17	SUB CHASSIS OPERATING BOARD		
18	HEAD SPRING		
19	E-RING		
20	PINCH ROLLER ASS'Y		
21	PINCH ROLLER SPRING		
22	M/C R.H SCREW		M2.6x6
23	SPRING WASHER		M2.6
24	FLAT WASHER		3 x10 x0.8t
25	F.F GUIDE SHAFT		
26	PINCH ROLLER SHAFT		
27	SUB CHASSIS SPACER		
28	E-RING		1.5 x0.5t
29	REWIND ROLLER		
30	IDLER SPINDLE		
31	REEL CAP		
32	REEL STAND ASS'Y		
33	REEL CAP		
34	MOTOR		
35	M/C R.H SCREW		M3x4 (150)
36	SPRING WASHER		
37	M/C R.H SCREW		M2.6x5
38	SPRING WASHER		2.6
39	CASSETTE GUIDE "R"		
40	SPRING WASHER		M3
41	M/C R.H SCREW		M3x5(180)
42	TRANS B.K.T		
43	BRAKE SPRING		
44	IDLER "B"		
45	REC SAFETY BOARD		
46	AMP POLE "B"		
47	REEL SHAFT ASS'Y(SPINDLE)		
48	CASSETTE GUIDE "L"		
49	PRE-OPERATING BOARD SHAFT		
50	NYLON WASHER		3.2 x8 x0.3t
51	E-RING		
52	REC BOARD		
53	REWIND SPRING		
54	LEVER RETURN SPRING		
55	SUB CHASSIS SPACER		
56	REWIND BOARD SHAFT		
57	IDLER SPRING		
58	REWIND BOARD		
59	LOCK WASHER		
60	SPRING WASHER		
61	AMP POLE "A"		
62	SUB CHASSIS SPACER		
63	LEVER RETURN SPRING		
64	IDLER METAL		
65	IDLER SPRING		
66	IDLER OPERATING BOARD		
67	SPRING WASHER		
68	SPRING WASHER		
69	M/C R.H SCREW		M2.6x6
70	IDLER "A"		
71	IDLER BOARD GUIDE		
72	REC SAFETY SPRING		
73	M/C F.H SCREW		M2.6x5
74	CASSETTE RECEIVER		
75	FRICTION SHAFT		
76	MAIN CHASSIS		
77	EJECT LOCK BOARD		
78	M/C R.H SCREW		M3x5(180)
79	SPRING WASHER		M3
80	MOTOR B.K.T		
81	SPRING WASHER		M2.6
82	M/C SCREW R.H		M2.3x4
83	M/C R.H SCREW		M2.3x4
84	EJECT TENSION SPRING		
85	EJECT "B"		
86	NYLON WASHER		
87	E-RING		
88	EJECT LOCK BOARD TENSION SPRING		
89	NYLON WASHER		2.1 x4 x0.3t
90	CAPSTAN METAL ASS'Y(BEARING)		
91	CAPSTAN ASS'Y		
92	LEAF SWITCH		
93	M/C R.H SCREW		M2x4
94	E-RING		
95	NYLON WASHER		
96	EJECT "A"		
97	CAPSTAN HOLDER BEARING PLATE		
98	M/C R.H SCREW		M3x5 (180)
99	FRICTION ASS'Y		
100	FRICTION SPRING		
101	E-RING		
102	PIANO SWITCH HOLDER SPINDLE		
103	C-RING		
104	LEVER METAL		
105	LEVER SPRING		
106	PIANO SWITCH HOLDER		
107	PIANO SWITCH WAVING BOARD		
108	SPRING WASHER		M2.6
109	M/C R.H SCREW		M2.6x5
110	WAVING BOARD SPRING		
111	M/C R.H SCREW		M2.6x6
112	SLIDE VOLUME B.K.T		
113	SPACER		
114	SLIDE VOLUME		
115	VOLUME SUPPORTER		
116	POST "A"		
117	FUNCTION NAME PLATE		
118	CASSETTE LID SPRING		
119	MIRROR		
120	CASSETTE LID		
121	CASSETTE LID PLATE		
122	SPEAKER GRILL NET		
123	SPEAKER GRILL		
124	BOTTOM CABINET		
125	BACK CABINET		
126	BATTERY LID		
127	BATTERY TERMINAL		
128	BATTERY SPRING		
129	SPEC. NAME PLATE		
130	AC JACK NAME PLATE		
131	AC SOCKET		
132	M/C F.H SCREW	M2.6x5	
133	DIN SOCKET		
134	M/C F.H SCREW	M2.6x8	
135	MICROPHONE JACK		
136	MICROPHONE NUT		
137	EARPHONE JACK		
138	EARPHONE NUT		
139	CONDENSER MIC RUBBER		
140	CONDENSER MIC		
141	STRAP METAL		
142	SLIDE SWITCH KNOB		
143	POST "B"		
144	M/C R.H SCREW	M3X5	
145	BACK COVER B.K.T		
146	SLIDE SWITCH		
147	M/C F.H SCREW	M2x5	
148	SLIDE VOLUME KNOB		
149	PUSH BUTTON		
150			

CS-508 , CR-2003

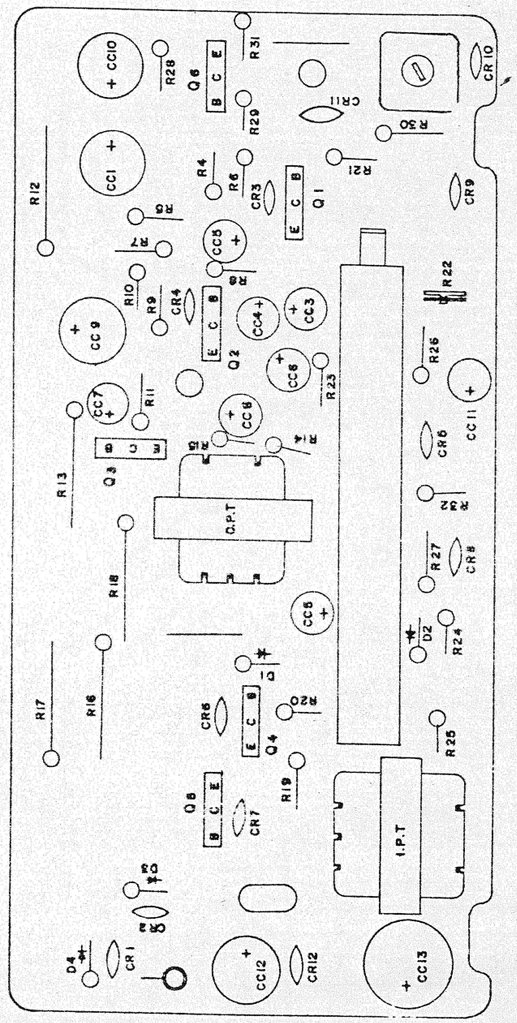
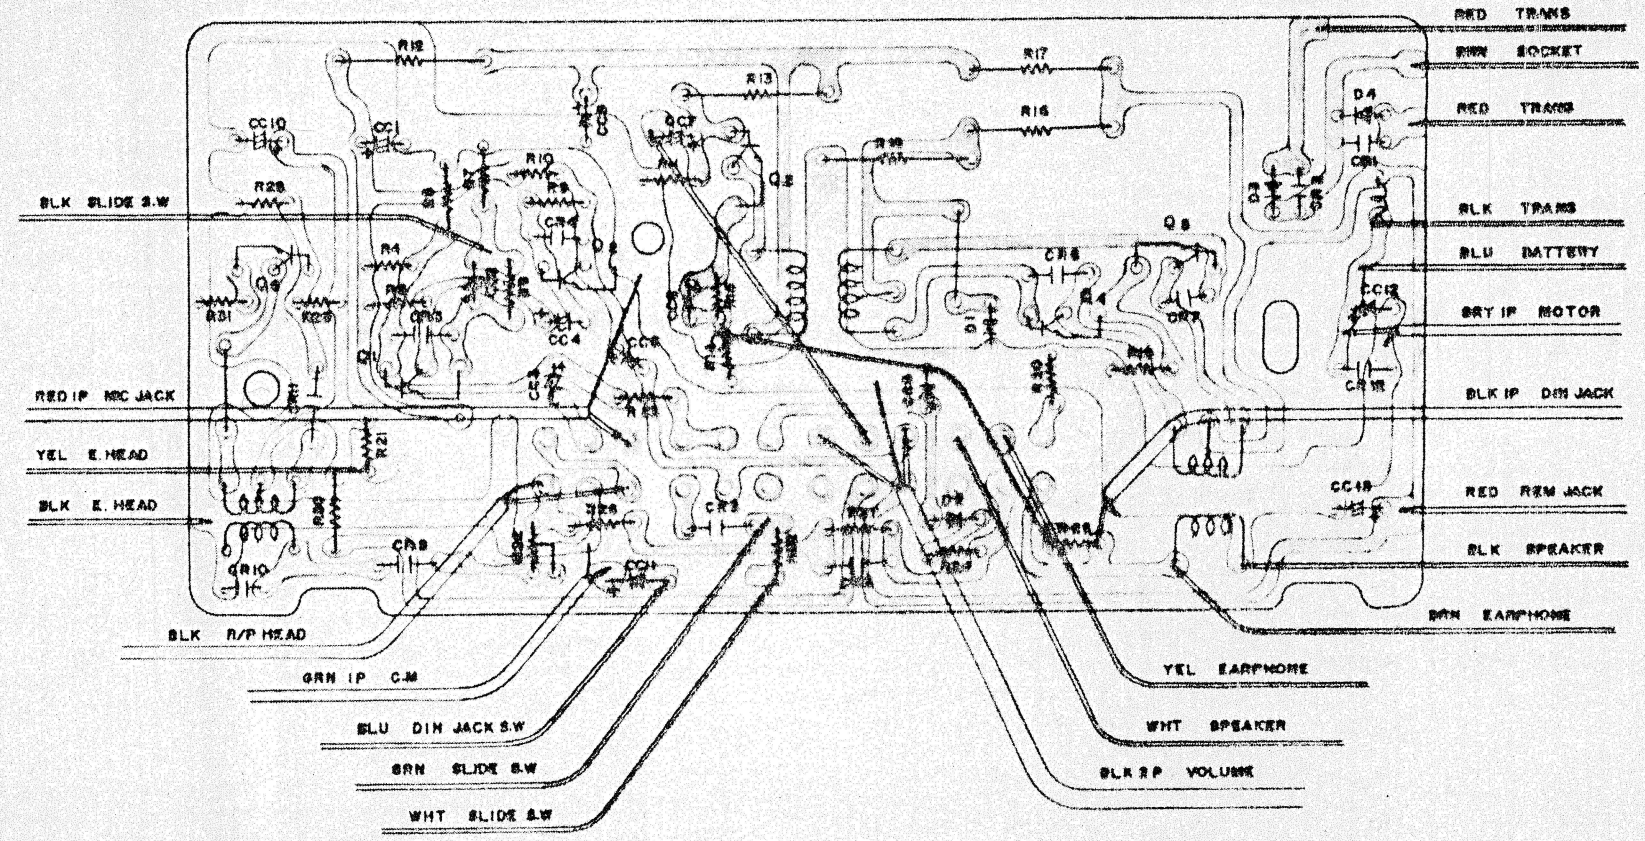
CS - 508, CR - 2003